# **Wiring Diagrams**

DET-1620 Detonation Sensing Monitor for use with

CPU-2000 Digital Ignition System

Form DET-1620 WD 4-10








Use these wiring diagrams for proper wiring instructions for a DET-1620 Detonation Sensing Monitor to a CPU-2000 Ignition System. Refer to the DET-1600 Installation/Operation manual and terminal program for all other installation, operation, and configuration information.

### **DET-1620 to CPU-2000 Ignition System**

#### CPU-2000 LOGIC MODULE

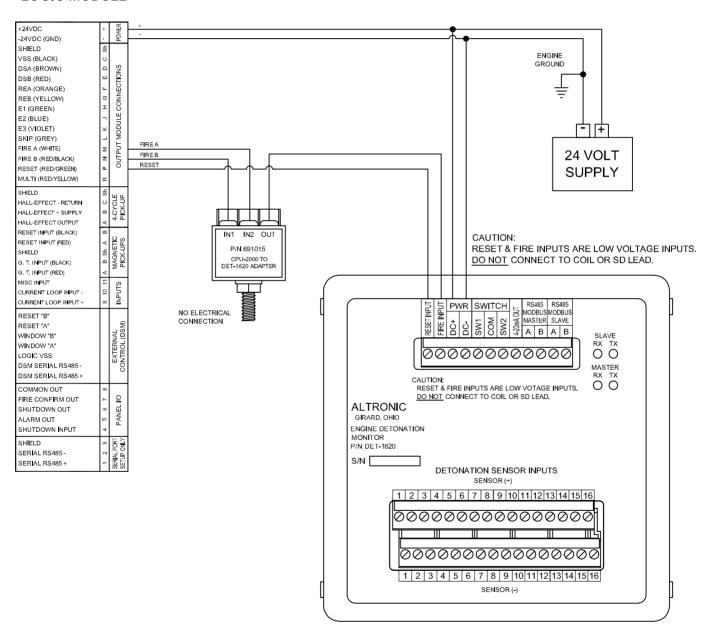



## DET-1620 to CPU-2000 Ignition System with all cylinder firings appearing on "Fire A"

#### CPU-2000 LOGIC MODULE

